



1. Contents

4 up Door Hangers x 110 Sheets

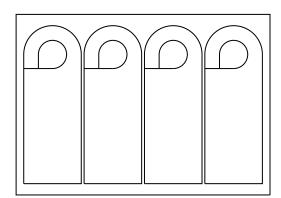


2. Artwork Guidelines

- 1. Allow at least 3mm bleed over all perforations.
- 2. Use the outer line of the artwork template to centre your artwork on the sheet.
- 3. View the artwork template for more information.

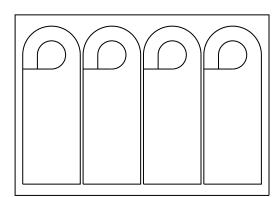

3. Printing Guidelines


- 1. Print on the coated side of the stock.
- 2. This stock should only be used from the bypass tray and in simplex mode.
- 3. Maximum tray load should be 30 sheets.
- 4. Print with the arrow indicator on the leading edge, as shown.

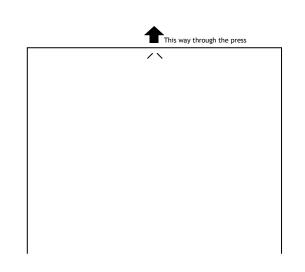



4. Finishing Guidelines

- 1. Where possible pre-fold perforated lines.
- 2. With the sheet print side down, locate the 'Tear In' points.
- 3. Carefully tear into the sheet, and following the perforated line tear waste away until you have removed the Door Hanger from the sheet, do not remove the hole whilst the hanger is still in the sheet.
- 4. Repeat on the second, third, and fourth hanger on the sheet.
- 5. Once the hanger has been removed from the sheet, carefully tear following the perforated line, until the central disc is removed as shown in Fig. 2 The Door Hanger is now complete.

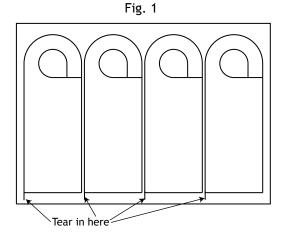

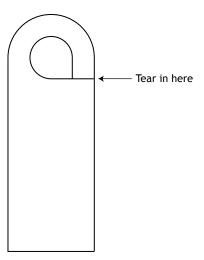


Fig. 2